


USE TWO 4" ANCHORS
WITH TWO SCREWS FOR EACH
2'0" LENGTH OF MOLDING

ALL MOLDINGS
REQUIRE MITER
CUTS ON JOB TO FIT

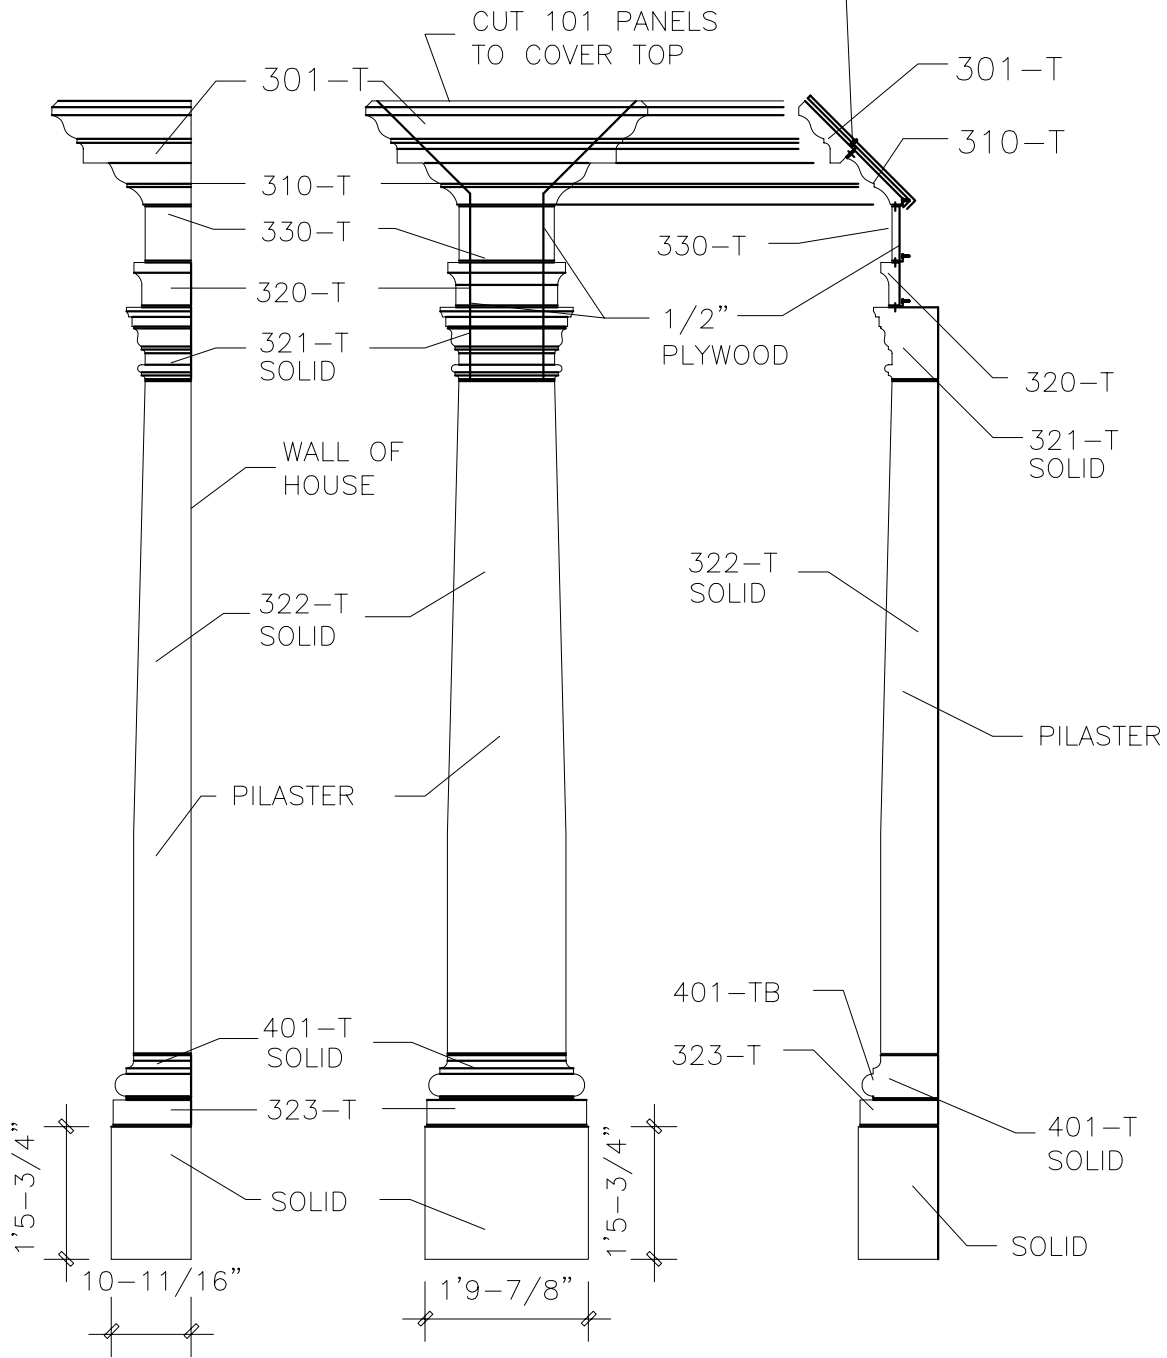

1

ELEVATIONS OF TUSCAN PILASTER

REFERENCE 1.1.2 FOR FRONT ELEVATION

AMERICAN LIMESTONE COMPANY
A TEXAS CORPORATION
WWW.AMERICANLIMESTONE.COM
INFO@AMERICANLIMESTONE.COM

ELEVATIONS OF TUSCAN PILASTER

1.1.5B