



ARCHITECTS AND BUILDERS SHALL ALIGN THE TOP OF THE WINDOW UNIT WITH THE HORIZONTAL STONE COURSING. IF A WINDOW SURROUND IS SPECIFIED AS INDICATED HERE, THE HEAD OF THE WINDOW UNIT SHALL BE SIX (6) INCHES BELOW THE ADJACENT STONE COURSE.

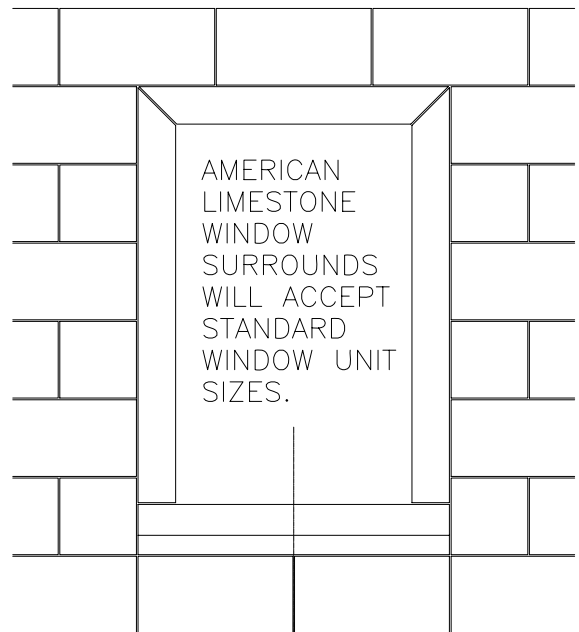

DISTANCES BETWEEN THE CENTERLINES OF WINDOWS SHALL BE PLANNED IN ONE FOOT INCREMENTS SO THAT THE STONE PANELS AND JOINTS WILL CENTER OVER THE WINDOW.

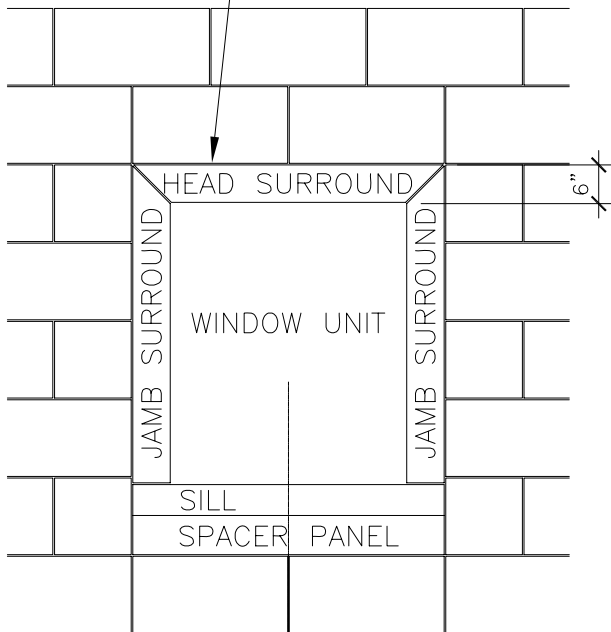